



VM5 Series of Molded Case Circuit Breaker

Product Specification

3. Specification and model description

SN	Name	Specification, type code	
1	Design code	VM5: Design code	
2	Frame rating	320: 320A 630: 630A	
3	High voltage	HU: Hight voltage	
4	Breaking capacity	L, M	
5	Rated current	63A~630A	
6	Protection unit type	TAL: Thermal protection unit (power distribution protection, 63A) TMD: Thermal magnetic adjustable unit (For power distribution protection, 80~630A)	
7	Number of poles	3P	
8	Accessories (separated with"/" between different accessories)	Connection accessories	Empty: Fixed type wiring in front of the board
		Electrical accessories	AL: Alarm contact AX: Auxiliary contact SHT: Shunt release
		Expansion accessories	K6: Phase separator K11: Insulating mounting plate CD3: Motor operator CS1: Rotary handle operator

* Electrical accessories

Accessories	Voltage				
SHT Shunt release	AC230V	AC400V	DC220V	AC/DC110V	DC24V

If the accessory voltage and voltage control loop is inconsistent, please use indicate the accessory voltage after accessory.


Example

VM5-630HUM630/TMD/3/AX/SHT (AC230V)

Meaning: VM5 series circuit breaker; the frame level is 630; 3 poles; rated current is 630A; fixed rear connection; accessory contains auxiliary contact and shunt release with voltage (AC230V).

4. Accessories

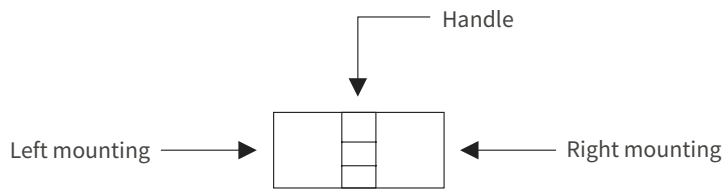


Combined mode of electrical accessories



- Alarm contact
- Auxiliary contact
- Shunt release

Accessory code	Accessory name	Model	VM5-320HU	VM5-630HU
		Poles	3	3
AL	Alarm contact			
SHT	Shunt release			
AX	Auxiliary contact			
AX+SHT	Shunt release and alarm contact			
AL+SHT	Shunt release and alarm contact			
AL+AX	Auxiliary contact and alarm contact			
AX+AL+SHT	Shunt release, auxiliary contact and alarm contact			
	Without accessory			

5. Main Electrical Characteristics

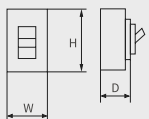Type		VM5-320HU	VM5-630HU		
					
Rated current	A	63, 80, 100, 125, 140, 160, 180, 200, 225, 250, 320	315, 350, 400, 500, 630		
Pole number		3			
Rated operating voltage	AC50~60Hz (V)	800, 1000			
Rated insulation voltage	V	1000			
Rated impulse withstand voltage Uimp	kV	8			
Breaking capacity		L	M	L	M
Ultimate short-circuit breaking(Icu)	AC800V	30	50	50	50
	AC1000V	15	30	15	18
Service short-circuit breaking(Ics)	AC800V	30	50	36.5	50
	AC1000V	12	18	15	18
Mechanical durability	Times	12000		8000	
Electrical durability	AC800V	Times		1000	
	AC1000V	Times		1000	
Outline dimension (mm) (H × W × D)		185 × 112.5 × 114.5		255 × 140 × 122.5	
Isolation function		Have isolation function			
Optional trip unit	TMD	Thermally adjustable (0.7~1.0) Magnetic adjustable (5~10)			
	TAL	Thermally adjustable (0.7~1.0) Magnetic fixation (10In)			

Note:

VM5-320: 63A is thermally adjustable magnetic fixation, 80~320A is thermo-magnetic adjustable;

VM5-630: Only thermo-magnetic adjustable;

TMD/TAL: Data sheet of protection characteristics


Rated current	Inverse time acting characteristic (Ambient air temperature +40°C)		Instantaneous acting current
	1.05I _n (Cold state) Not acting time	1.3I _n (Cold state) Not acting time	
I _n ≤ 63	≥ 1h	<1h	TMD: 5~10±20% TAL: 10I _n ±20%
63<I _n ≤ 800	≥ 2h	<2h	

Derated coefficient of rated current

Circuit Breaker Model	+40°C	+45°C	+50°C	+55°C	+60°C	+65°C	+70°C
VM5-320HU	1.0 I _r	0.98 I _r	0.96 I _r	0.94 I _r	0.92 I _r	0.91 I _r	0.88 I _r
VM5-630HU	1.0 I _r	0.97 I _r	0.95 I _r	0.93 I _r	0.91 I _r	0.89 I _r	0.87 I _r

Derated coefficient of high altitude of VM5 series MCCB

Item	Parameter						
Elevation	2000	2500	3000	3500	4000	4500	5000
Power frequency withstand voltage	3500	3500	3200	3000	2800	2750	2500
Isolation voltage	1250	1250	1250	1140	1140	1140	1140
Breaking capacity correction factor	1	1	0.9	0.85	0.8	0.75	0.7
Working current correction factor	1	1	0.98	0.97	0.96	0.95	0.94

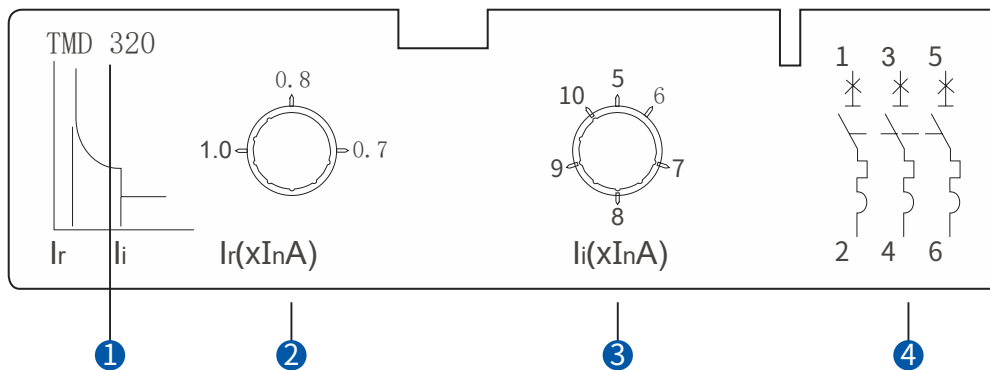


- ① Thermal magnetic adjustable unit
Rated current is 320A
- ② Thermally adjustable
- ③ Magnetic adjustable
- ④ Wiring diagram

6. Normal Working Environment of Circuit Breaker

- The altitude of the installation site doesn't exceed 5000m. See the above 'Derated coefficient of high altitude of VM5 series MCCB' table.
- Operating environment temperature: $-40\text{ }^{\circ}\text{C}\sim+70\text{ }^{\circ}\text{C}$, with an average value of no more than $+35\text{ }^{\circ}\text{C}$ within 24 hours. If the ambient temperature is higher than $+40\text{ }^{\circ}\text{C}$, See the above 'Derated coefficient of rated current' table .
- Its relative humidity at an ambient temperature of $+40\text{ }^{\circ}\text{C}$ should not exceed 50%. A higher relative humidity is allowed at a lower temperature. For example, the relative humidity at $20\text{ }^{\circ}\text{C}$ can reach 90%; for frost due to temperature change, the corresponding measures should be taken.
- The product can withstand the effects of wet air, salt mist, oil mist and mould.
- The installation category of the circuit breaker connected to the main loop is: Category III (power distribution and control level), The installation category of the circuit breaker not connected to the main loop is: Category II (load level).
- The pollution level is Level 3.
- Degree of protection: IP 20.
- The product should be installed in places that are free from explosive media, media corrosive to metal, insulation damaging gas, and conductive dust, which should be also avoided from snow and rain.
- In case of stricter user conditions than the above description, negotiate with the manufacturer.


7. Size and Connection

VM5-320HU series dimensions and installation

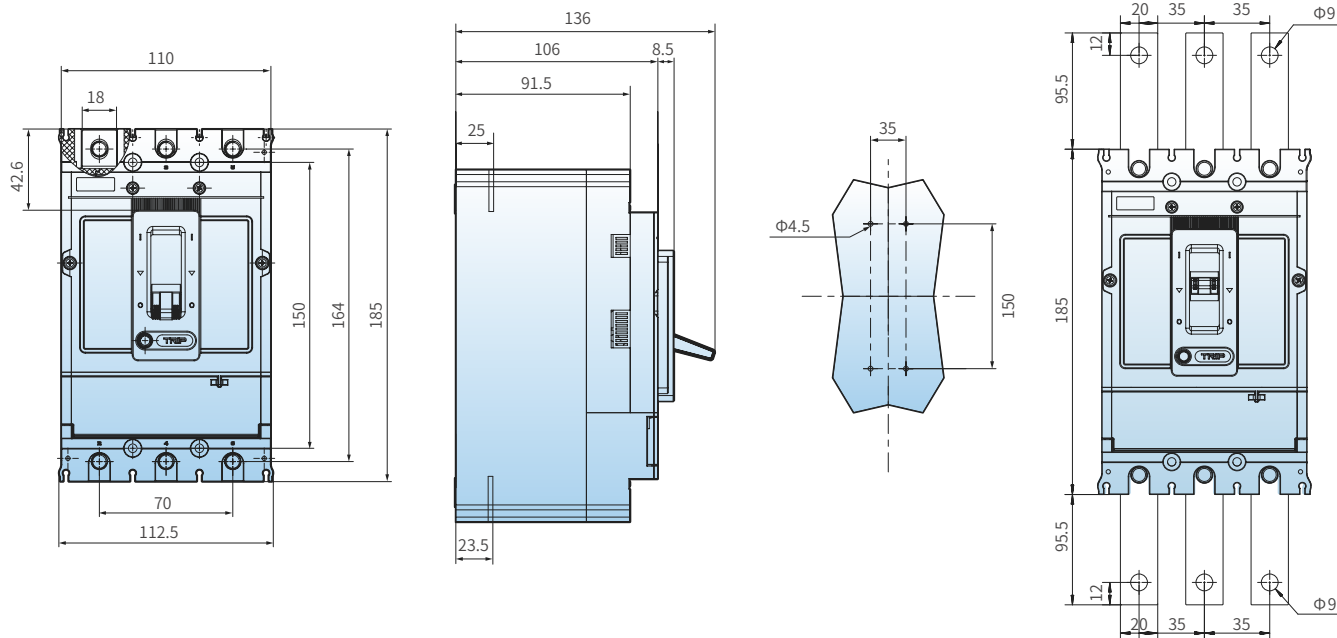


For toggling handle

VM5-320HU series dimensions with terminal cover

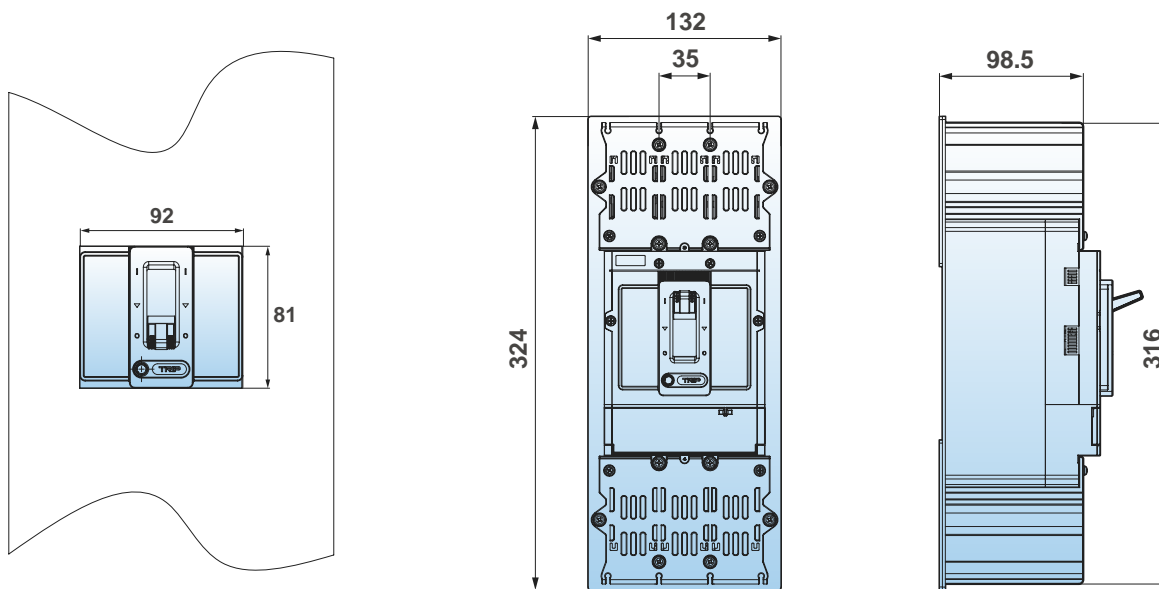


VM5-630HU series dimensions and installation

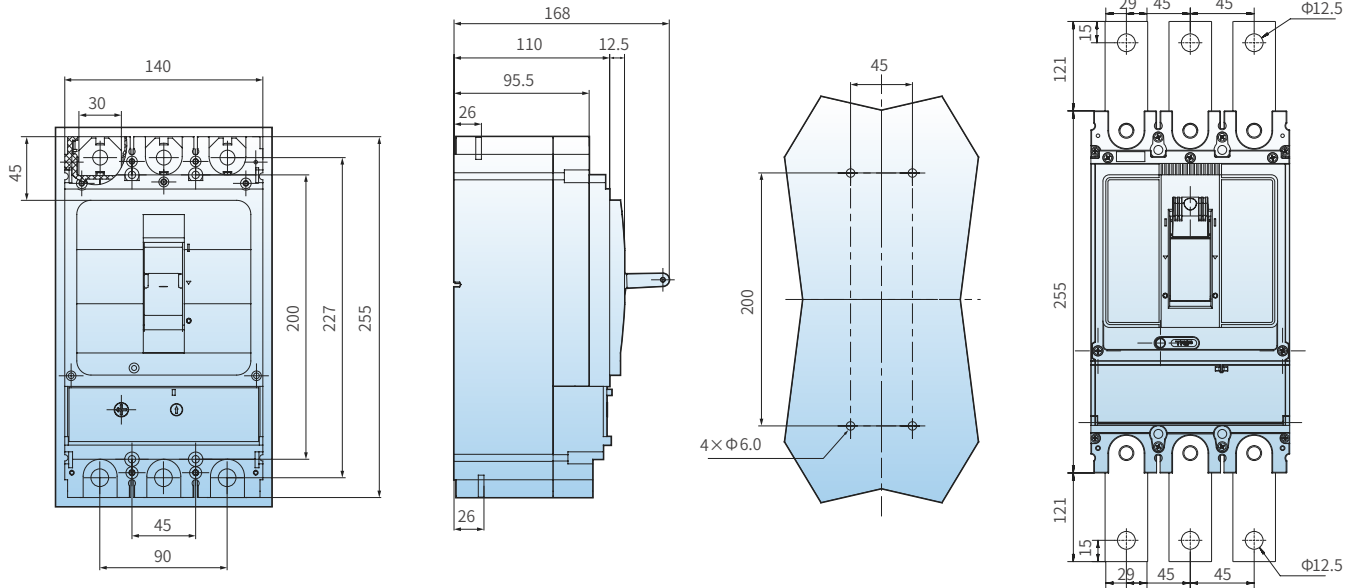

For toggling handle


VM5-630HU series dimensions with terminal cover

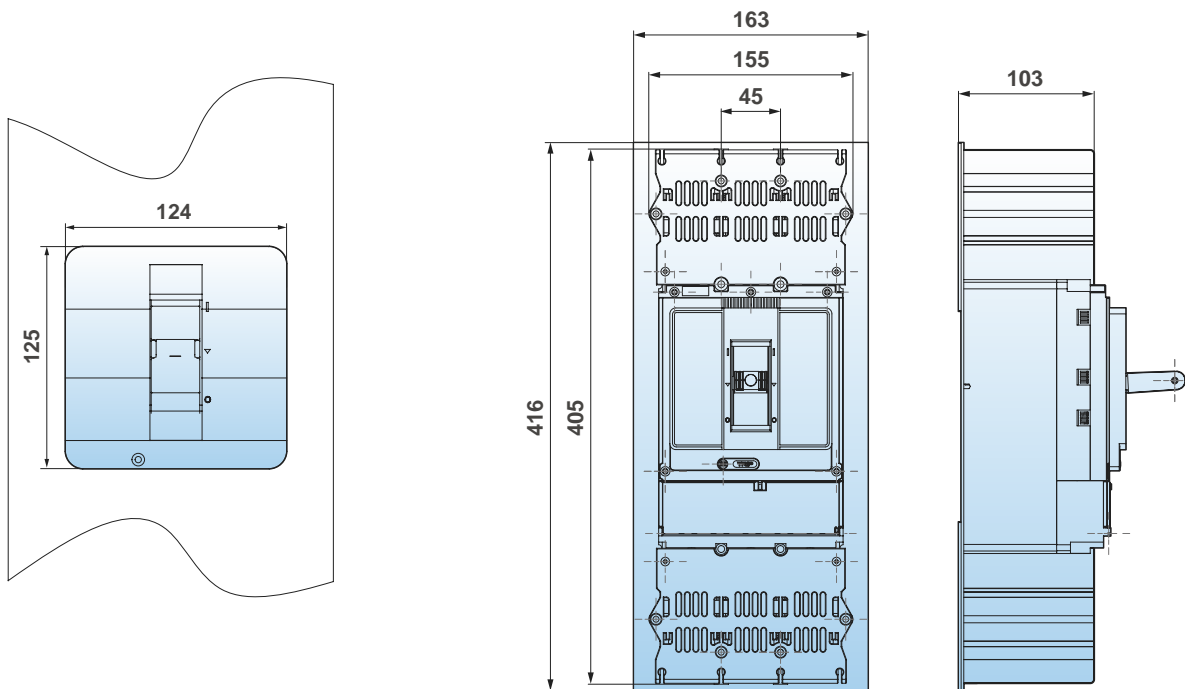


Safety distance and installation diagram for VM5-320HU

VM5-320HU

Safety distance

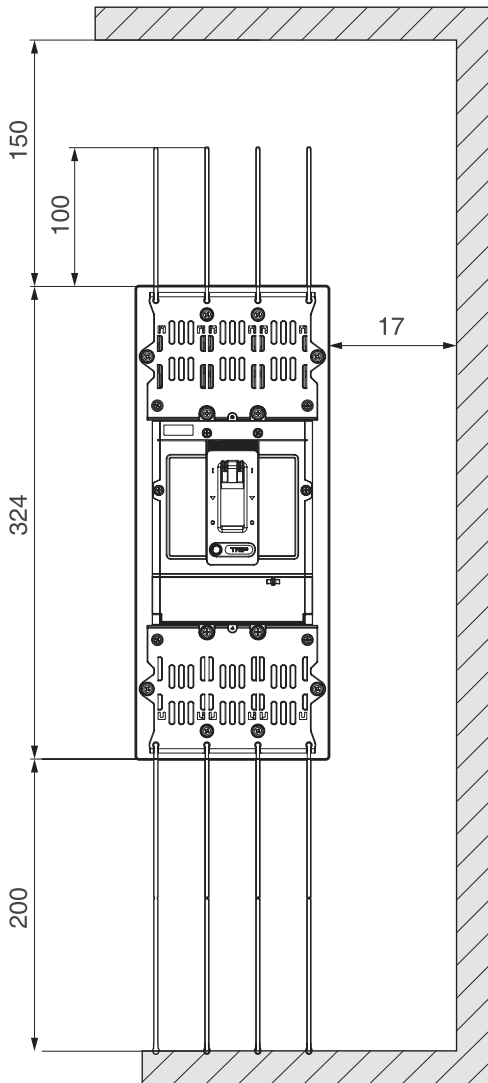


Minimum distance between two adjacent circuit breakers

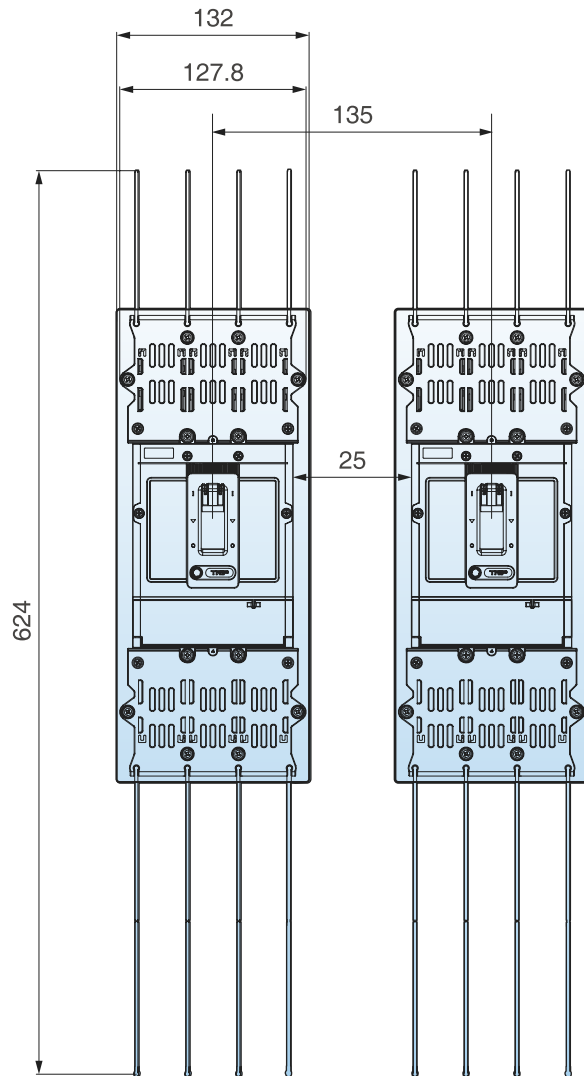


Note: There are 8 phase separators as standard, the top is short and the bottom is long, When the number of circuit breakers installed side by side is ≥ 2 , please keep the installation position of the interphase clapboard of the side phase consistent (all installed on phase A side or phase C side), 1 long and 1 short (phase separator) should be added for the side phase of the circuit breaker close to the metal cabinet.

Short terminal shield rear connected

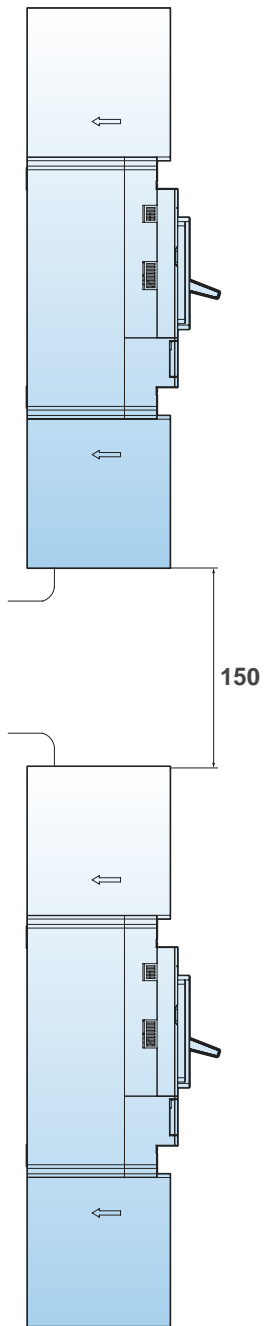


Minimum distance between circuit breaker and front panels

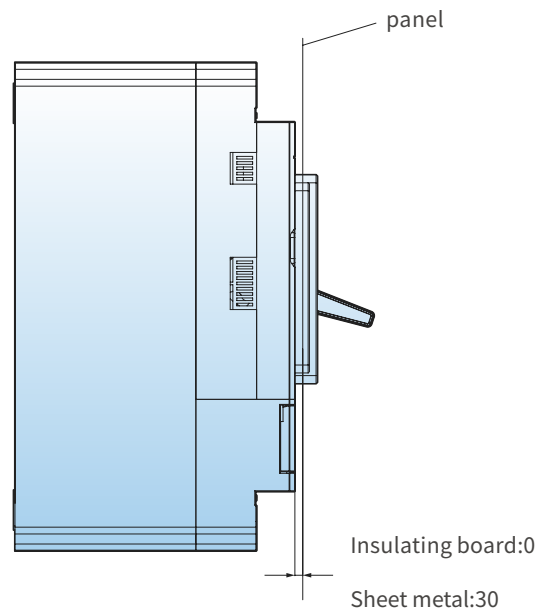


Safety distance and installation diagram for VM5-630HU

VM5-630HU

Safety distance

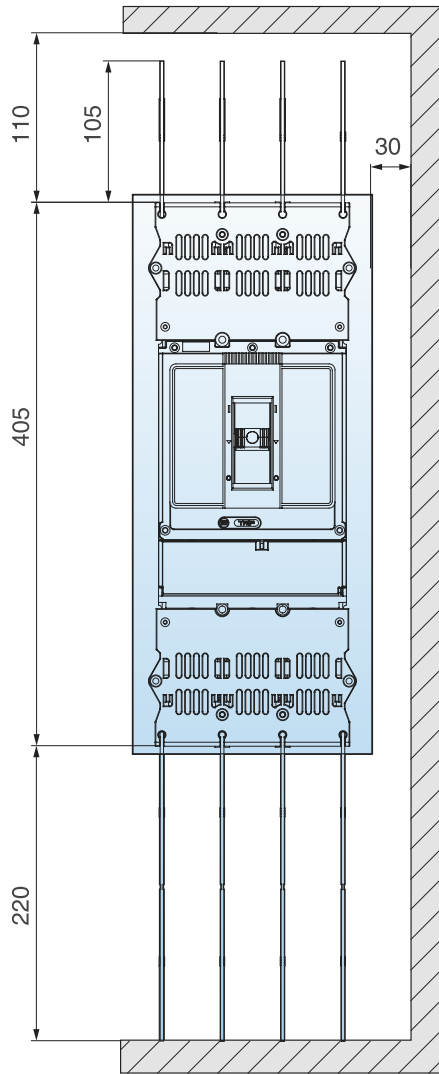


Minimum distance between two adjacent circuit breakers

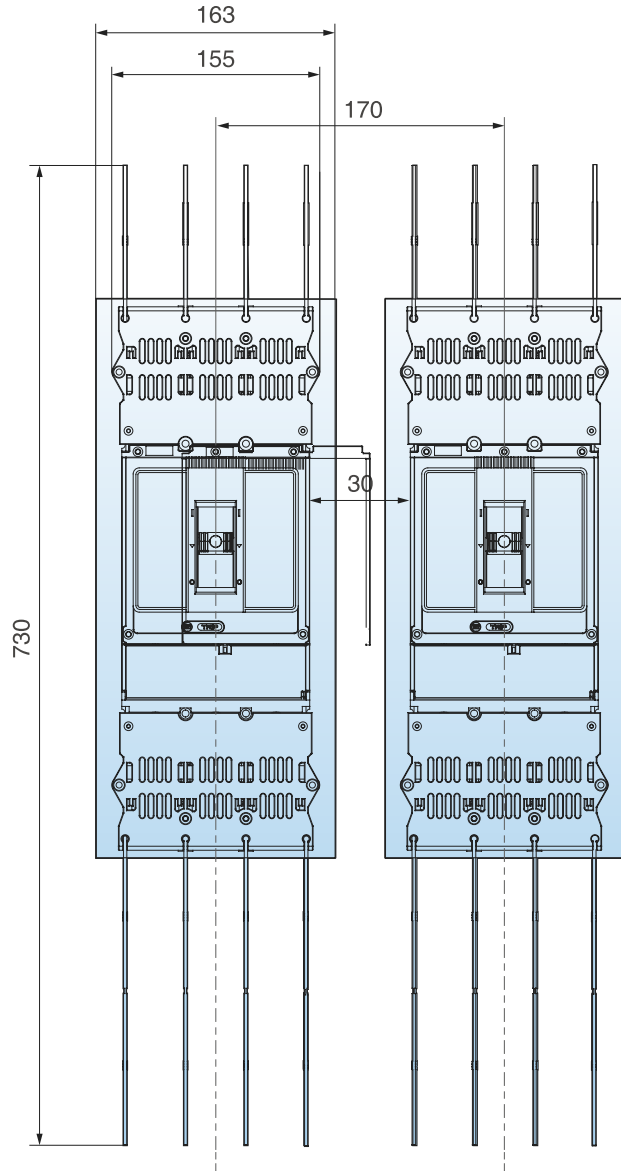


Note: There are 8 phase separators as standard, the top is short and the bottom is long, When the number of circuit breakers installed side by side is ≥ 2 , please keep the installation position of the interphase clapboard of the side phase consistent (all installed on phase A side or phase C side), 1 long and 1 short (phase separator) should be added for the side phase of the circuit breaker close to the metal cabinet.

Short terminal shield rear connected

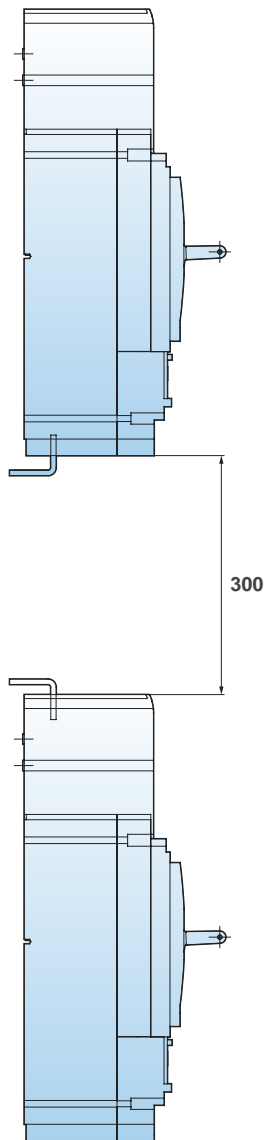


Minimum distance between circuit breaker and front panels

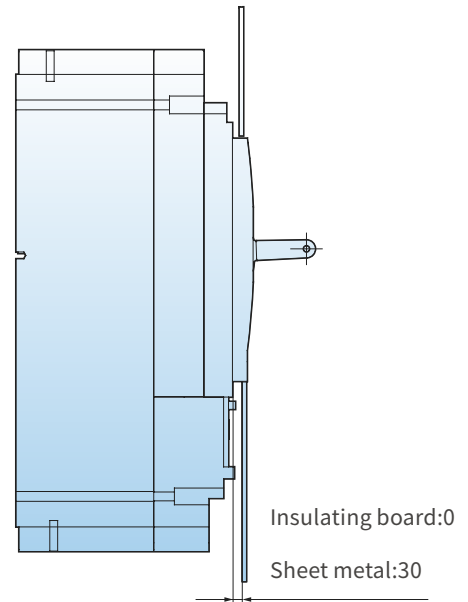


Motor-operated mechanism

VM5-320HU

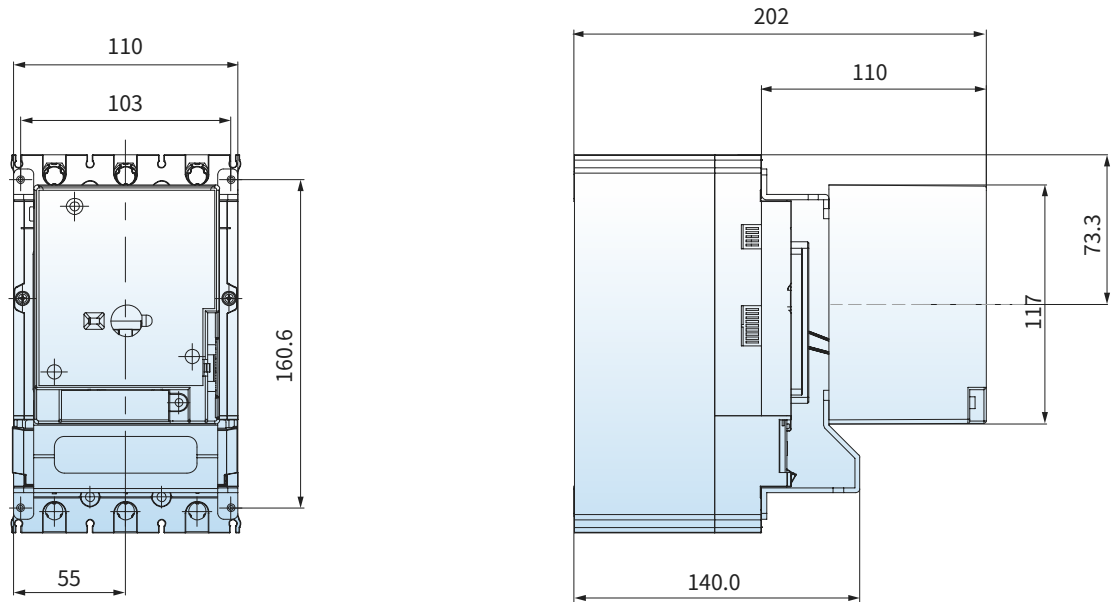


VM5-630HU

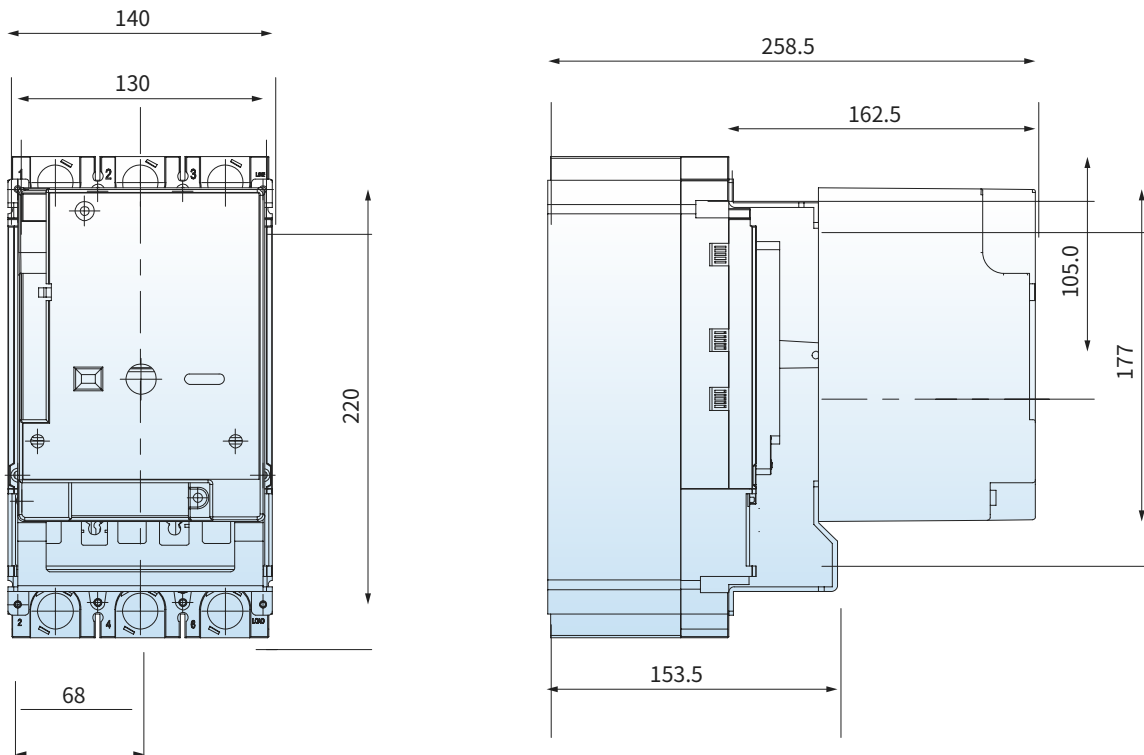


Motor-operated mechanism

VM5-320HU

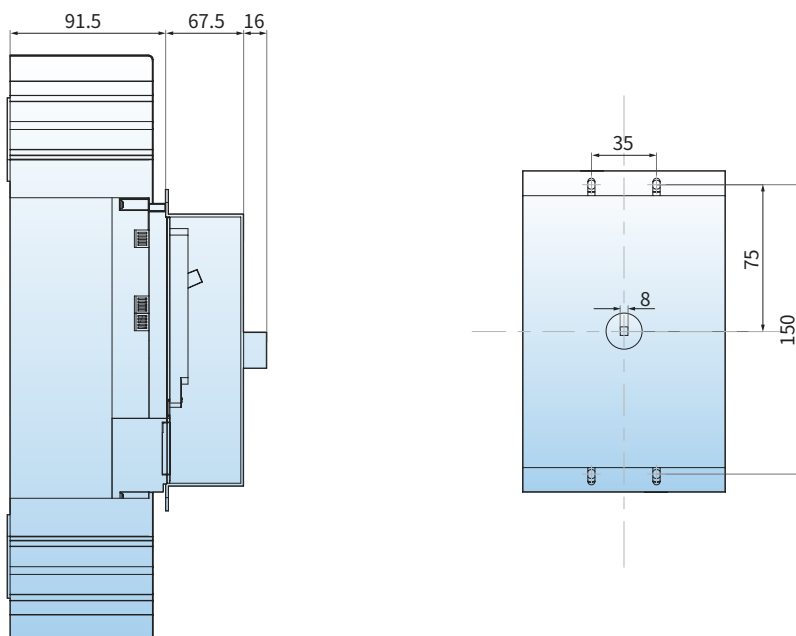

VM5-630HU

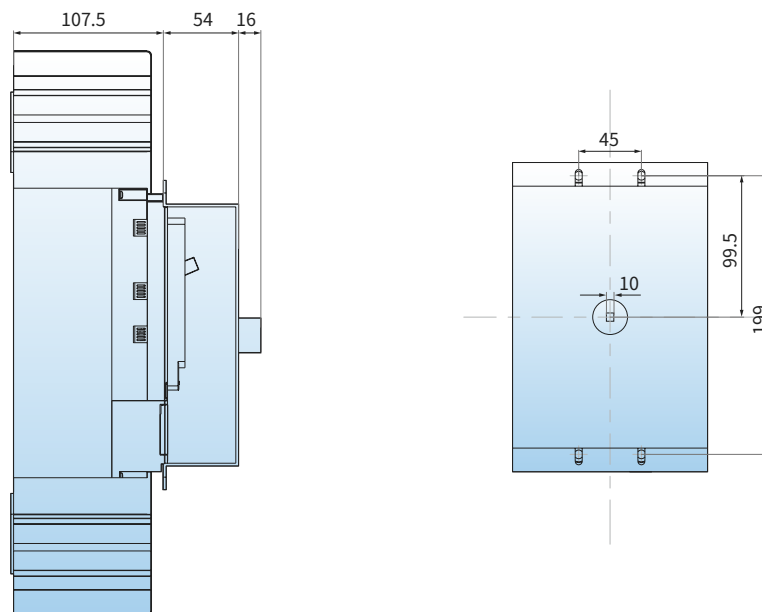

Cross-sectional area of wire


Cross-sectional areas of connection wiring with different rated currents

Rated current (A)	10	16 20	25	32	40 50	63	80	100	125 140	160	180 200 225	250	315 350	400
Rated current (mm ²)	1.5	2.5	4	6	10	16	25	35	50	70	95	120	185	240


Rated current (A)	Cable		Copper bar	
	Sectional area (mm ²)	Quantity	Size	Quantity
500	150	2	30×5	2
630	185	2	40×5	2

Fixed connection

Terminal part

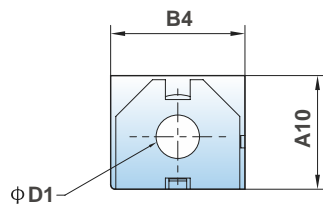


Conductor section

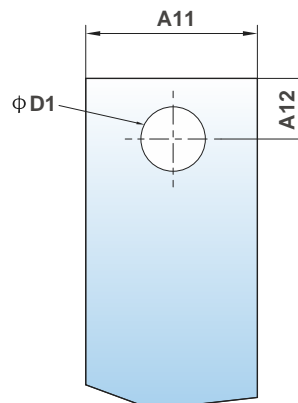


Model	B4	A10	A11	A12	ΦD1
VM5-320	24	20.5	20	9.5	9
VM5-630	32	30	30	15	12.5

8. Wiring diagram

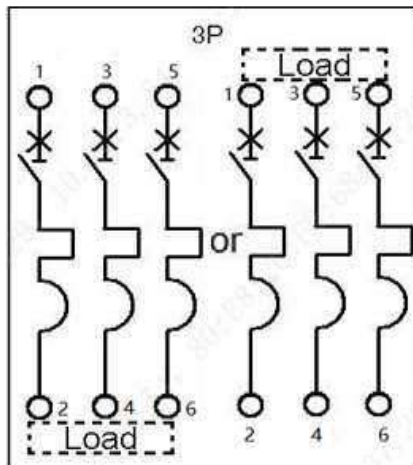

9. Accessory function description

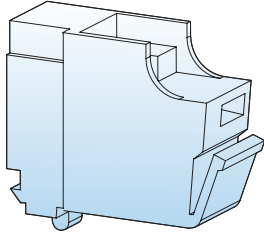

Alarm contact (AL)


Alarm contact (AL)

Function

The product outputs alarm signal when it is tripped by outer excitation signal due to overload, short circuit, undervoltage, or when the release button is pressed. This function is particularly useful in an automatic system, since that a fault signal can be sent to the designated place. And the fault signal will turn on due to an internal microswitch, when circuit breaker releases. But for normal opening or closing operations, it does not have any action.

Alarm contact operating characteristics

Circuit breaker status	Alarm contact status
The statuses of open and close	
The statuses of tripping	

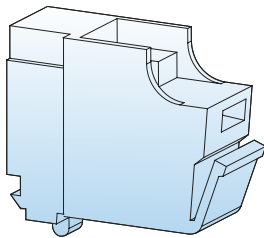

Auxiliary contact (AX)

Auxiliary contact (AX)

Function

Auxiliary switch is used for indication of remote "ON" and "OFF". Each switch contains two contacts, which share a common end of connection. The ON/OFF position depends on the state of main contact. When the circuit breaker is open, one of them is normally open, and the other is closed, or vice versa.

Auxiliary contact operating characteristics

Circuit breaker status	Auxiliary contact status
The statuses of open	
The statuses of close	

Alarm contact, Auxiliary contact rated operational current

Classification	Rated current I_{nm}	Conventional thermal current $I_{th}(A)$	Rated working current $I_e(A)$	
			AC400V	DC220V
Auxiliary contact	≤ 250	3	0.3	0.15
	$400 \leq I_{nm} \leq 1000$	3	0.4	0.2
Alarm contact	$10 \leq I_{nm} \leq 1000$	-	AC220V/1.0A	0.15

ON-OFF capacity of Alarm contact and Auxiliary contact under normal conditions

Utilization category	ON				OFF				Number of operation cycles	Number of operation cycles per minute	Power time
	I/I_e	U/U_e	$\cos\phi$	$T_{0.95}$	I/I_e	U/U_e	$\cos\phi$	$T_{0.95}$			
AC-14	10	1	0.7	-	1	1	0.7	-	6050	6	$\geq 0.05s$
DC-13	1	1	-	$6 \times P_e$	1	1	-	$6 \times P_e$			$\geq 0.05s$

ON-OFF capacity of alarm contact and auxiliary contact under abnormal conditions

Utilization category	ON				OFF				Number of operation cycles	Number of operation cycles per minute	Power time
	I/I_e	U/U_e	$\cos\phi$	$T_{0.95}$	I/I_e	U/U_e	$\cos\phi$	$T_{0.95}$			
AC-14	6	1	0.7	-	1	1	0.7	-	-	-	$\geq 0.05s$
DC-13	1.1	1.1	-	$6 \times P_e$	1.1	1.1	-	$6 \times P_e$	10	6	$\geq 0.05s$


Note: 1. $T_{0.95}=6P_e$ is an empirical formula in which the unit of "Pe" is watt and the unit of $T_{0.95}$ is millisecond.

2. The number of operation of Auxiliary contact can equal to that of the circuit breaker, if the number of operation of circuit breaker is less than 6050.

3. The operation frequency and power-on time of an auxiliary contact are allowed to be the same as those of the main circuit.

4. If $T_{0.95}$ is more than 0.05s, the power-on time is at least $T_{0.95}$.

Shunt release (SHT)

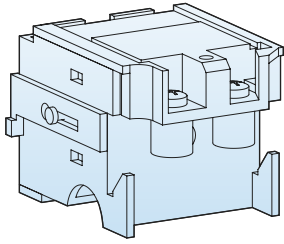

Shunt release (SHT)

Function


Shunt release refers to the device which disconnect circuit breaker with current from a distance.

A shunt release can cut off the signal circuit automatically after tripping.


Operating Characteristics

Voltage specification	AC50Hz: 110V 230V 400V DC: 24V 110V 220V
Operating characteristics	When the operation voltage is 70%~110% of the rated control voltage, the shunt release should trip the circuit breaker reliably.

Connection diagram (internal accessories of a circuit breaker)

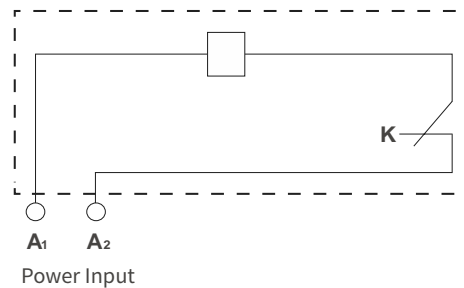

K is a microswitch closed contact of micro switch installed in series with the coil in shunt tripper, when the breaker is tripping, the switch is off by itself, when the breaker is closing, and then the switch is on.

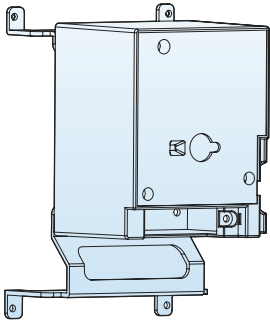


Motor operator mechanism (CD3)

Motor operator mechanism (CD3)

a closing coil is used to control a circuit breaker from a distance. And a CD3 Motor-operated mechanism has the following features: CD3 type electric operating mechanism has

- The operation mode, manual or automatic mode, can be chosen.
- Hand drive handle is in front of a face cover.

The wiring diagram of a CD3 motor-operated mechanism is shown as following (internal accessories are indicated in the dotted square)

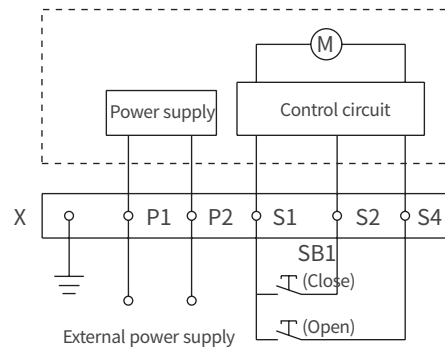

Please pay attention to the following two points when wiring:

1. be used as the controller, but it needs to be routed separately from the power line;
2. When the lead out distance of the electrical control line is $\geq 5\text{m}$ or there is a possibility of strong electromagnetic interference in the surrounding environment, the control line should be shielded or connected to the control end (S1, S2, S4) of the electrical control through an intermediate relay installed near the electrical control, and the distance between the relay and the electrical control should not exceed 5m;


Manual operation

- The internal power supply is automatically closed, if the switch is operated to "manual" position.
- Put the handle into the slot in the front of an electric operating mechanism and then turn in a clockwise direction.
- Do not turn it in a counterclockwise direction.

Electric operation

- Auto connection
- Operating frequency should be no more than 3 times per minute.
- Using ON/OFF switches in the frequency range.
- Please do not input ON/OFF signal during automatic operation.
- UVT need to be applied a rated voltage before electric operation, if a UVT is mounted in a circuit breaker.


Motor-operator mechanism appearance

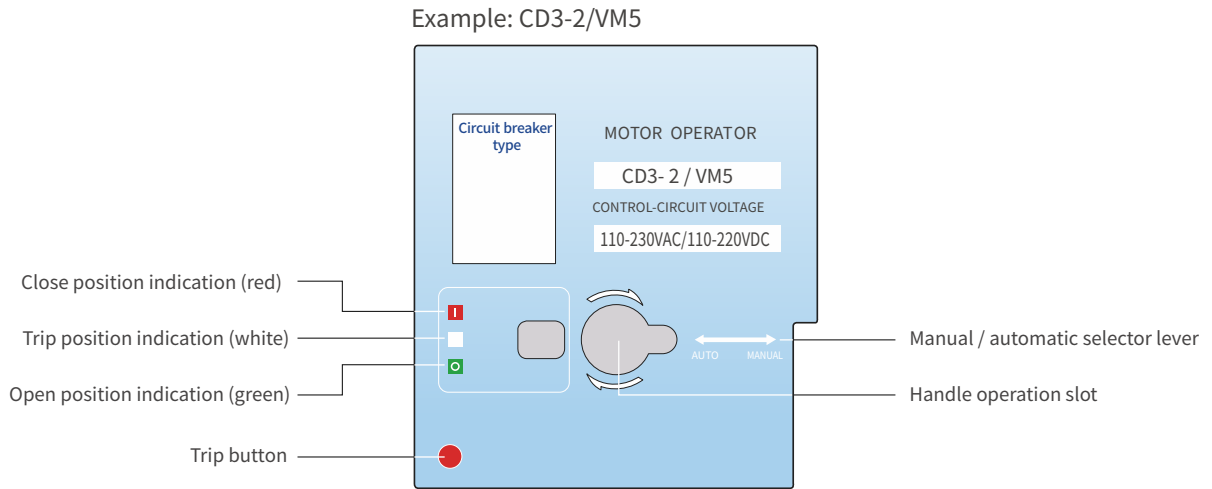

Acting Current, Motor Power and Longevity of CD3 type Power-driven Operating Mechanism

Equipped with circuit breaker type	Electric operating mechanism type	Control voltage	Starting current(A)	Response time(ms)		Power consumption	Durability
				Closed	Disconnect		
VM5-320HU	CD3-2	AC 110V/230V/400V DC 110V/220V/24V	≤ 0.5 $24VDC \leq 2$	≤ 700	≤ 700	14	10000
VM5-630HU	CD3-3	AC 110V/230V/400V DC 110V/220V/24V	≤ 2 $24VDC \leq 5$	≤ 1000	≤ 1000	35	5000

Note: After the circuit breaker trips, power-driven operating mechanism has to make the circuit reaker recramped, then it can be turned on.

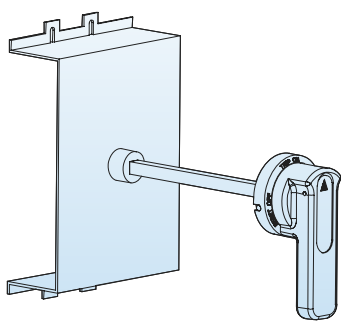


Rotary handle operator (CS1)


With the unique design and transmission mechanism, the rotary handle operator can make the circuit breaker open, close and lock the tripping part by turning the handle.

CS series rotary handle operator has the following features:


- Equipped with circular and square rotary operating handles.
- The panel sheet of the cabinet cannot be opened when the circuit breaker is on (i.e interlock with the door).
- The handle can related supporting drawers, and interlock with the drawer unit.
- If fault of the operation handle occurs during its closing state, the panel sheet can be opened by operating the emergency reliever.
- Extended rotary handle can be used and the length of the extension handle is determined according to the distance between the rotary handle and the door. The shortest and the longest are 150mm and 500mm

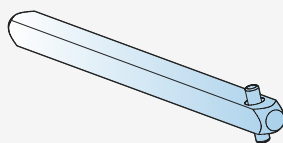

Connecting rod

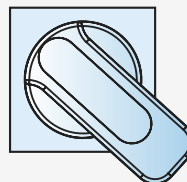

F-type square handle

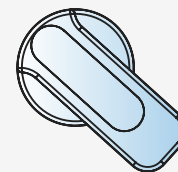

R-type round handle



10. Environment

The environment that comply with RoHS instruction.

11. List of installation accessories



Accessories list form(VM5-320)

SN	Name	Specification	3P Quantity/Set
1	Cross small pan-head screw	M4×100	4
2	Hexagon nut	4	4
3	Plain washer	4	4
4	Terminal screw	M8×25	6
5	Terminal plain washer	8	6
6	Terminal spring washer	8	6
7	Terminal cover screw	M4×50	8
8	Terminal cover screw	ST2.9×9.5	4
9	Phase separator	—	8
10	Insulating partition	—	1

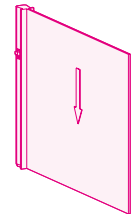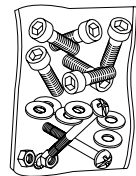

Accessories list form(VM5-630)

SN	Name	Specification	3P Quantity/Set
1	Cross small pan-head screw	M5×90	4
2	Hexagon nut	5	4
3	Plain washer	5	4
4	Terminal screw	M10×25	6
5	Terminal plain washer	10	6
6	Terminal cover screw	M4×65	8
7	Terminal cover screw	ST2.9×9.5	4
8	Phase separator	—	8
9	Insulating partition	—	1

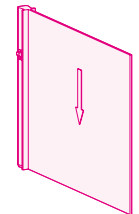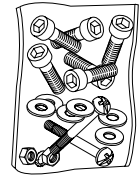

12. Circuit breaker notes

- Various characteristics and accessories of the circuit breaker are set in the factory. The circuit breaker, tripping unit or other accessories can only be adjusted, installed and maintained by the trained or qualified professionals according to the parameter requirements of the line design.
- Ensure that the power supply is off before installing or removing any device .
- The circuit breaker handle can be located in three positions, indicating three states on, off and free tripping. When the handle is in the free tripping position, pull the handle in the off direction when the circuit breaker is connected and on.